



TECHNICAL DATA SHEET OF THE PRODUCT Automatic air vent with shut-off valve

1. Purpose and scope of application


The air vent is designed for automatic removal of air and other gases from hot water heating systems, cold and hot water supply. It can be used on pipelines that transport liquid media that are non-aggressive to the materials of the product (water, propylene glycol, ethylene glycol, etc.). Sealing nozzles for connection to the pipeline or manifold, which eliminates the need for an additional sealant during installation.

The Raftec system has two air duct options - with and without a shut-off valve. The valve allows you to dismantle the air vent without emptying the serviced section of the pipeline.

2. Technical specifications

№	Characteristic	Designation		
1	Working pressure, MPa	1,0		
2	Test pressure, MPa 1,5			
3	Minimum working pressure, bar 0,02			
4	Maximum working environment temperature, °C 110			
5	Working environment	Water, glycol solution 50%		
6	Operating pressure range for optimum productivity, MPa 0,05÷0,7			
7	Maximum ambient temperature, °C	+60		
8	Maximum ambient humidity %	80		
9	Thread of connecting branch pipe, inches	1/2"		
10	Average full service life, years	25		


3. Construction and materials

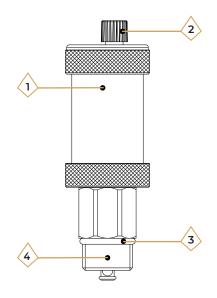

№	Element name	Material	Material grade according to standards
1	Body	Hot pressed brass nickel plated	CW617N
2	Cap	Plastic	ABS
3	Sealing ring	Ethylene-propylene-diene monomer	EPDM
4	Thread	Hot pressed brass nickel plated	CW617N



4. Nomenclature and overall dimensions

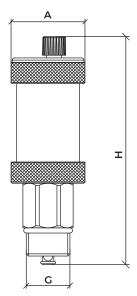

Automatic air vent with shut-off valve					
Size	Article	G	A, mm.	H,mm.	Weight, gr.
1/2"	AWH01	1/2"	33	100	133

5. Operating and maintenance instructions

- 1. The automatic air vent must be operated under the conditions specified in the tables listed in Section No. 2 "Technical Specifications".
- 2. Installation of automatic air vent must be performed by a specialist.

6. Installation instructions

- 1. Installation can be performed by a specialist or a specialized organization.
- 2. The installation of connectors should be carried out in accordance with the requirements of SP 73.13330.2012 "Internal plumbing systems".
- 3. The valve must not be subject to loads from the pipeline (bending, compression, stretching, torsion, distortion, vibration, misalignment of pipes, uneven tightening of fasteners).
- 4. The misalignment of the connected pipelines must not exceed 3 mm for a length of up to 1 m + 1 mm for each subsequent meter.
- 5. After installation, the system units must be tested for tightness using hydraulic or pneumatic methods.
- 6. As a sealant for threaded connections, it is necessary to use FUM tape (fluoroplastic sealant), polyamide thread with silicone, flax with special pastes, as well as other sealing materials that ensure the tightness of the connections.

7. Warranty obligations

- 1. The manufacturer guarantees that the products comply with safety requirements, provided that the consumer complies with the rules of use, transportation, storage, installation and operation.
- 2. The warranty covers all defects caused by the manufacturer's fault.
- 3. The warranty does not cover defects that occur in the following cases:
 - violation of passport regimes for transportation, storage, installation, operation and maintenance of the product;
 - improper transportation and loading and unloading operations;
 - the presence of traces of exposure to substances that are aggressive to the product materials;
 - the presence of damage caused by fire, natural disasters, force majeure circumstances;
 - the presence of damage caused by incorrect actions of the consumer;
 - the presence of traces of third-party interference in the design of the product.
- 4. The manufacturer reserves the right to make changes to the product design that do not affect the declared technical characteristics.



9. Warranty terms and conditions

- 1. Claims for the quality of the goods may be made during the warranty period.
- 2. Defective products during the warranty period are repaired or exchanged for new ones free of charge. The decision to replace or repair the product is made by the service center. The replaced product or its part obtained as a result of the repair becomes the property of the service center.
- 3. The costs associated with dismantling, installation and transportation of the defective product during the warranty period are not reimbursed to the Buyer.
- 4. In cases where the claim is unfounded, the costs of diagnostics and examination are paid by the Buyer.
- 5. Products are accepted for warranty repair (as well as when returned) fully equipped.

WARR	ANTY CARD №
Product name	
Brand, article, size	
Quantity	
Name and address of the trading organ	nization
Date of sale Sell	
Stamp or seal	
of the trading organization	I AGREE with the conditions:
	BUYER
	(signature)
consumer.	eighty-four months) from the date of sale to the end uality of the goods, the buyer shall provide the following ing:
- name of the organization, full namber;	ame of the buyer, actual address and contact phone
main system parameters;short description of the defect;	zation that performed the installation;
	ystem in which the product was installed;
4. A completed warranty card issue	d on the manufacturer's website «raftec.eu».
Return or exchange mark:	
Date	